Infrared Multi Analyzer IM series




10-wavelength, 4-constituent, High-speed/High-repeatability, Multi-interface, Easy to operate

The IM series is an on-line multi IR wavelength analyzer utilizing the infrared absorption technology for measuring product constituent and/or thickness. Signal processing capabilities are built into the compact all-in-one detector unit for easy installation and operation. A maximum of 99 calibration curves can be stored into the detector memory for numerous measurement applications. The detector can be used by itself or connected to a PC/plant control system, as both analog and digital outputs are provided. A remote setting display unit, connectable up to 9 detector units, can be used to setup various detector functions and also displays measured values.

FEATURES

- Up to 10 wavelengths, capable of measuring 4 constituents such as; moisture, film-thickness, organism, and coating-thickness in real time simultaneously.
- Connectivity to multiple interfaces, RS485 (MODBUS), Ethernet (LAN)
- High-speed & High-repeatability (28ms)
- Multi-calculation function
- Self-diagnostic function, easy maintenance.
- Conforms to CE standards

■ CONFIGURATION

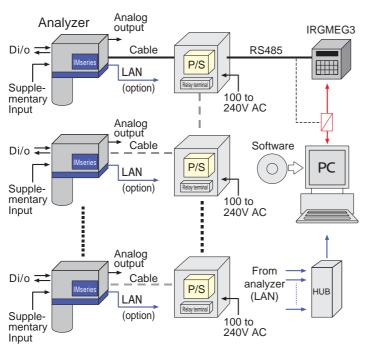



■APPLICATION


- Measuring moisture of wood chip.
- Measuring the thickness of sheet or film.
- Measuring the organism, moisture and lipid of fodder.

Setting display unit

- Measuring the organism, moisture and oil of potato chips.
- Measuring moisture of garbage (RDF moisture).
- Measuring the coating thickness on the painting sheet.
- Measuring moisture of powder.
- Measuring moisture in cleaning solution.
- Measuring moisture of clay.
- Measuring moisture of fiber.
- Measure & Control the coating thickness of Laminate-sheet production line.
- Measure & Control the painting thickness.

■MODELS

Analyzer unit

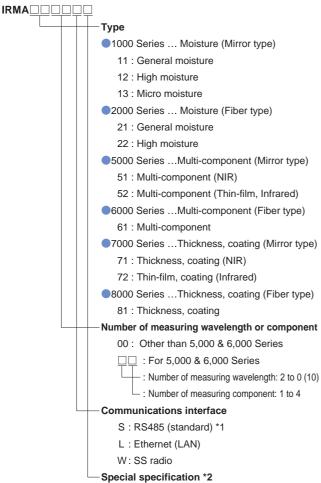

Blank : Standard

1 : Small diameter type

2 : Rust prevention type

2 : Rust prevention type

3 : Gain specifications

4 : P polarized light

*1: RS485 is not applicable when L,W are selected.

*2: Other special applications in the models are available.

■MODELS

Setting display unit IRGMEG3□

Communications interface

R: RS232C (standard)

A: RS422A (option)

S: RS485



Setting display unit

■ MEASURING EXAMPLES

Object	Range	Accu.	H	
General moisture (%)				
Glass / pottery / cement				
Potter's clay	0 to 12	>±0.3	R	
Iron / metal				
Coal	0 to 15	>±0.2	S	
Mix raw material	0 to 10	>±0.2	В	
Iron oxide	0 to 10	>±0.2	N	
Foods				
Starch	0 to 25	>±0.2	G	
Bread-crumbs	0 to 20	>±0.2	Т	
Soybean	0 to 15	>±0.2	P	
Milk powder	0 to 5	>±0.2	Р	
Sugar / salt	0 to 2	>±0.05	F	
Flavouring	0 to 10	>±0.2	٧	
Tea	0 to 15	>±0.2	F	
Chemicals				
Catalyst	0 to 10	>±0.2	F	
Medium	0 to 20	>±0.2	F	
Detergent	0 to 15	>±0.2	N	
Ink	0 to 5	>±0.2	F	
Fertilizer	0 to 5	>±0.2	Т	
Rubber / fiber / etc.				
Vinylon fiber	0 to 10	>±0.2	C	
Acrylic fiber	0 to 10	>±0.2	Т	
Wood chip	0 to 10	>±0.2	А	
Paper	0 to 10	>±0.1	R	

High moisture (%)			
Plaster	5 to 15	>±0.7	
Wet paper	40 to 70	>±0.7	
Raw bread crumbs		>±0.5	
Clay	0 to 30	>±0.7	
Silica sand	0 to 10	>±0.5	
Bicarbonate	0 to 18	>±0.6	
Micro moisture		>±0.0	
ABS, PVC powder	0 to 1	>±0.08	
Granular ferrite	0 to 0.5	>±0.08	
Thickness (µm)			
Polyethylene PE		>±0.2	
Polypropylene PP		>±0.2	
Polyester PET		>±0.2	
Vinyl chloride PVC		>±0.2	
PVA	10 to	>±0.2	
EVA	3000	>±0.2	
Polystyrene PS		>±0.2	
Polycarbonate		>±0.2	
Nylon PA		>±0.2	
Polyimide PI		>±0.3	
TAC film		>±0.2	
Coating (g/m²)			
Coat-paper		>±0.2	
Tuck-paper, label	10 to	>±0.2	
Adhesive WET/DRY	1000	>±0.2	
Resin on steel-board		>±0.2	

■SOFTWARE PACKAGE


Main Screen



Displays measured data, trend and alarm value. Displays 4 constituents on one screen.

Save data into specified folder, enable to search or read out the data.

Create the Calibration Curve

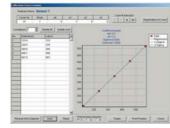

Creates the calibration curve for new sample, and transmits the regression type data to detector.

Setup Screen

And Charles					The Parket of th
Probati	1 798	1. 191	7 194	1. 10. (1	01Product1
Production 1	17 AC 944 S	1 (MI)	(C) M(DISPOSED II	Section and
Property	0.00		0.00	1 90	
Peace	E 100	4 W	0.00	INCOME:	London Line seembrak storik
Probability	- T E - 1988 - 1	7 80	11.765	11.00	E 10. 40.
Protects	E WY	1 80	THE REAL PROPERTY.	CONTRACT OF	(million) have
(Peace)	E 198	4 - 90	1.460	1, 40	Colores Emparadous send
Trease .	THE RESIDENCE	\$1,000 C	TO ME	DOMONICS:	2 10 40
THACK .	11 193	1) 180	10 100	1 00	Showing them
- NAMES	TERROR CONTO	1 10	27,0467	DISCORPORATE OF THE PARTY OF TH	Linear Louise Day seed
This will	10.198	1. 80	F. 360	1 30	President and Parties and
TO DESIGNATION OF THE PERSON O	N. W. C.	1.00	F (80)	IDECMO!	
(Podoří)	11 100 100	1 80	fi bet	17 90	Emiliant for
Triality	THE RESERVE OF	A 180	100 March	DOM: DAKE	[(mem] (memor) high sent
	E 494	1	1 00	1 -	
Planting .	EDITOR DWKCh	V	E. 107	TOWNS TO SECOND	
Product?	6. 699.3	4 80	11 160	1.40	Salma Continues - Au-
TO PRODUCE TO SERVICE	THE RESERVE	1 36	E A MILE	IIIA(DMIII)	[tiped!] (set) tout
Product is	6.48	1 80	a but	1, 500	
T Prints.	THE RESIDENCE	-100	EXC. 146 CT	THE REAL PROPERTY.	
PHANT	10.769	1 80	7 980	1 10	Sec. Anna
71.3NAME	1000	1 100	EXCMUSE.	TOWER STREET	
Protection	1 100	1 700	6 And	1 40	
CONTRACTOR	STATE OF THE OWNER.	-1000	ER DESI	EDWC980E	Action have been been
Prescript 1	1 (40)	1 40	1 40	1 10	
Total E	THE RESERVE	-	1.00	CONC.	Tener I to
Policiti	1. 193	1	1. 10		



■GENERAL SPECIFICATIONS

OINFRARED MULTI ANALYZER

Measuring system: Infrared absorption type

Measuring wavelength:

Up to 10 wavelengths

Measuring component:

Up to 4 constituents

Light source: Tungsten lamp Measuring distance: 200 to 400mm

(IRMA1300: 160 to 300mm)

Measuring diameter: 50mm□/300mm

(IRMA1300:30mm^{\(\sigma\)}/200m)

Analog output: 4 to 20mADC, 0.2% of full scale

(Load resistance: less than 500 Ω)

Communications: RS485 MODBUS
Output renewal cycle: 28ms

Display & setup: Displays data & setup parameter

Parameters are configurable by key

Computing: 2 or 3-color ratio calculation

Multiple regression calculation

No. of calibration curve: Up to 99 curves

Calibration curve: Linear, quadratic, cubic & multiple regression line

Calibration curve correction: Linear & quadratic correction

Smoothing (delay): 0 to 99 seconds
Calibration: By checking plate

Detector No. setup: When multiple detector operation,

detector No. is key configurable

Channel No. setup: Calibration curve No. is key configurable.

Self-diagnostic: Outputs contact signal and communications when

abnormal conditions

Correction input: Compensate measured value

by external 4 to 20mA DC (sample temperature, etc.)

External Di/o: Di(contact input) --- Perform either one of preset,

data-hold or real/smoothing

Do(contact output) --- Selects self

-diagnostic(1b) or Hi/low alarm(1a)

Working temperature:

0 to 50C (Use dry air cooling if higher than 45C $\,$

Outlet air temperature must be lower than 30C)

Power supply: 24V DC supplied from IR-WEP

(IR-WEP power supply: 100-240VAC)

Power consumption: Approx. 30VA
Connection: Terminal connection
Casing: Aluminum casting
Weight: Approx. 4.3kg

Mounting: Bolt suspension method with 4 pieces of M8 bolts

CE-standards: EN61326-1:2006

Emission : Class A Immunity : Table 2

■SPECIAL SPECIFICATIONS

Specifications	Content	
Small diameter	Mirror reflection type 30mm [□]	
Rust prevention	For inside printed-circuit board	
Gain specification	Special sample	
	* Judged by sample test	
P polarized light	Thin-film sample	
	* Judged by sample test	

SETTING DISPLAY UNIT

Input signal: RS485, up to 9 detectors connectable

Analog output: 4 to 20 mA DC, 3 output (Load resistance :

output 1, 2 : Less than $600\Omega,$ 3 : Less than $400\Omega)$ (Component 1 of detector no.1 to 3 is outputed for

multi head)

Communications: RS232C(standard), RS422A or RS485(option)

Output renewal cycle:

28ms x detector number

Display: 1. Measured data, LED 5 digit

2. Detector No., component No., calibration curve

No., parameter setup

(Conponent No. is displayed for detector multi-

component meter)

Detector No. setup: Detector No. 1 to 9 is key configurable

Component No. setup:

Component No. 1 to 4 is key configuable

(Depending on the detector)

Calibration curve No. setup:

Calibration curve No. is key configurable for each

of detector No. also configurable by external contact

Smoothing time: Smoothing time setting at smoothing calculation

T=0.0 to 9.9, 10 to 99 seconds

Calibration function: Perform calibration by key operation or by external

contact in use of checking plate

Hold / preset: Hold or preset the display and output by key

operation or by external contact

Calibration curve correction:

Online correction of calibration curve linear and

guadratic correction

External setup: Detector No., conponent No., calibration curve No.,

calibration, hold or preset

Alarm function: High/low limit alarm individual contact output (a

contact, common) beyond setting range

Self-diagnostic: Outputs contact signal(1b) when abnormal condition

Case material: Flame retardant polycarbonate

Working ambient: 0 to 50°C

Mounting: Panel-mount type

Weight: Approx. 0.6kg

Power supply: 100 to 240V AC 50/60Hz

Power consumption Max. 20VA

CE-standards: EN61326-1:2006

Emission: Class A Immunity: Table 2

FIBER UNIT

Measuring distance and diameter:

With lens --- φ 25/25mm to φ 40/100mm Without lens --- φ 20/15mm to φ 50/50mm

Fiber length: Standard 1.5m, Max.5m (Reflection type fiber)

Standard 2m, Max.10m (Transmission type fiber)

Fiber protection: Stainless steel flexible armour

Minimum bending radius:

R100mm

Working temperature:

Accessory:

0 to 150℃

Purge air flow: With lens --- Air purge disabled Without lens --- 5 to 20L/min

Vertical mounting holder

Flange holder




EXTERNAL DIMENSIONS


Analyzer IRMA

4-M8,H11 17 120 8 130 0 120 130 0 120 155 120


Setting display unit IRGMEG3

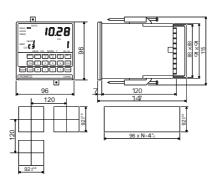


Power supply unit IR-WEP

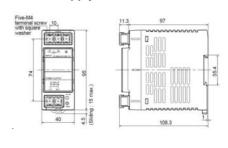


Air purge hood IR-WEA

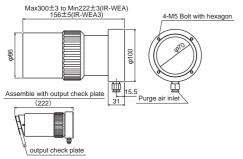


Output checking plate IR-WEB

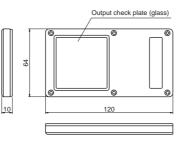


●Connecting cable IR-WERP□□□

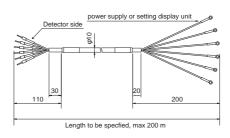


■Reflection type fiber (without lens) IR-WCRN□□□




■Reflection type fiber (with lens) IR-WCRE□□□




■Transmission type fiber IR-WCT□□□

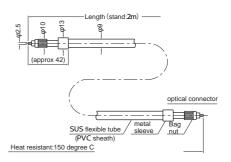


Output checking plate for reflection type fiber IR-WCR□B



Liquid cell IR-WCC

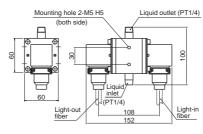

Air-cooling box IR-WEX

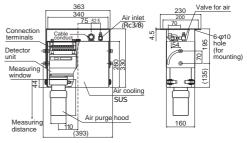

Unit: mm

Specifications subject to change without notice. Printed in Japan (I) 2019. ${\bf 3}$

CHINO CORPORATION

32-8 KUMANO-CHO,ITABASHI-KU,TOKYO 173-8632

Telephone: +81-3-3956-2171 Facsimile: +81-3-3956-0915 E-mail: inter@chino.co.jp Website: http://www.chino.co.jp/